QUICK START GUIDE

IMPORTANT! Always read the operating instructions before starting up the unit to obtain full safety and operating instructions.

Place the unit on a solid and flat surface in a levelled position. Make sure that the room is ventilated and dry. Ensure air circulation around the unit and protect it against direct sunlight.

The door keys are affixed to the power cable on the back side of the unit.

3 Remove the protective film from the display.

Make sure that the plug is mounted correctly, the power supply is stable and that the unit is grounded and plugged to the correct voltage in accordance with the serial plate.

Press the on/off button to start the unit. We recommend letting the unit run for 24 hours before usage. Until the set temperature is reached, different alarms may occur.

To accept an alarm:

battery is fully recharged, the alarm icon will automatically disappear.

Do not load any items into the unit until the set

the unit. The battery will automatically recharge. Once the


A low battery alarm may occur after switching on

Do not change the factory settings of the automatic defrost cycle as this can impair the performance of the unit (does not apply for -86°C ULT freezers).

temperature is reached.

External probes must be mounted through a porthole. Do NOT mount external probes or sensors through the door opening. This will affect the performance and stability of the unit and may cause condensation and/or ice build up on the door gasket and inside the unit.

Caution: Stored Items should be protected by a 24 hour/day monitoring system with alarm capability.

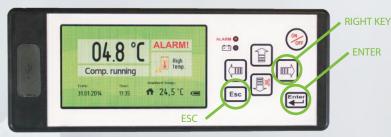

Press ENTER, then press the RIGHT KEY to highlight the OK key and then press ENTER once more to accept the alarm.

Press ESC to return to the main screen.

Distributed By:



701 Hemlock Road, Morgantown PA 19543 Tel: 1-877-770-2937 Email: Info@AzerSci.com www.AzerSci.com

