

PIG® HazMat Chemical


Absorbent Mat Pad - Lightweight



Specifications:

| | |
|---------------------|---|
| Dimensions (W x L): | 15 x 20 in (38 x 51 cm) |
| Mat weight: | Lightweight |
| Absorbency: | Up to 22 gal (83.8 L) per bag |
| Absorbency per: | Up to 14.08 oz (416.3 mL) per pad |
| Color: | Pink |
| Flammability: | Flame resistant - will melt and self-extinguish |
| Reusable: | No |
| Material: | Polypropylene |
| Perforated: | Yes, 10 x 15 in sections |
| Weight: | 17 lbs (7.7 kg) |

PIG exclusive!
Multiple layers of thermally-bonded, melt-blown polypropylene make PIG Mat the toughest mat on the market.

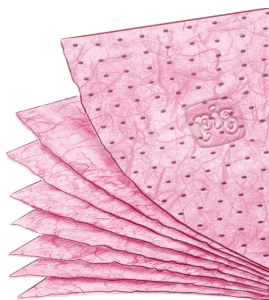

Reduce waste:
Mats are perforated so you can tear them and use only what you need.



OURS

PIG HazMat completely absorbs 98% sulfuric acid.

THEIRS

Highly concentrated corrosives just puddle on top.

Safely soak up acids, bases, corrosives and hazardous chemical spills with our HazMat absorbent pads.

Features:

- Clean up big spills or persistent leaks of hazardous chemicals with our most popular mat weight
- Soaks up the widest range of acids, bases, corrosives, chemicals and unknown liquids - even those with high concentrations like 98% sulfuric acid and 30% sodium hydroxide
- Absorbs a wide range of hazardous liquids found in chemical storage areas, around dip tanks, in cleaning agents used in food processing plants, in boiler rooms, labs, and R&D departments
- Pink color is designated for hazardous chemicals and easy to identify in a spill emergency or clean-up
- Chemical-resistant mat won't degrade or cause a dangerous reaction upon contact with corrosive spills
- PIG Mat lasts 2x longer than competitive mats and won't rip, tear or fray even when saturated; liquids absorb quickly for faster, easier cleanups and safer workplaces
- Mats take on the properties of absorbed liquids always take proper precautions when handling saturated absorbents

Disclaimer:

HAZ-MAT Notice - To ensure effectiveness and your safety, we recommend that you conduct compatibility and absorption testing of your chemicals with PIG® HAZ-MAT products prior to purchase. If you have any questions or need samples to test, please call Technical Services.

Safety Instructions Regarding Flammable Liquids for Flame Resistant Mats - Pig Absorbent Mats are flame resistant in their unused state, but take on the properties of flammable liquids they absorb. Always take proper precautions against potential ignition in handling and disposal of these mats if they have absorbed flammable liquids. For further assistance, please call Technical Services.

| Cat No. | Descriptions | UOM |
|------------|--|---------------|
| ES86611-14 | PIG® HazMat Chemical Absorbent Mat Pads, Lightweight | 100 pads/case |